Figure IV-33. Typical Tape Extensometer

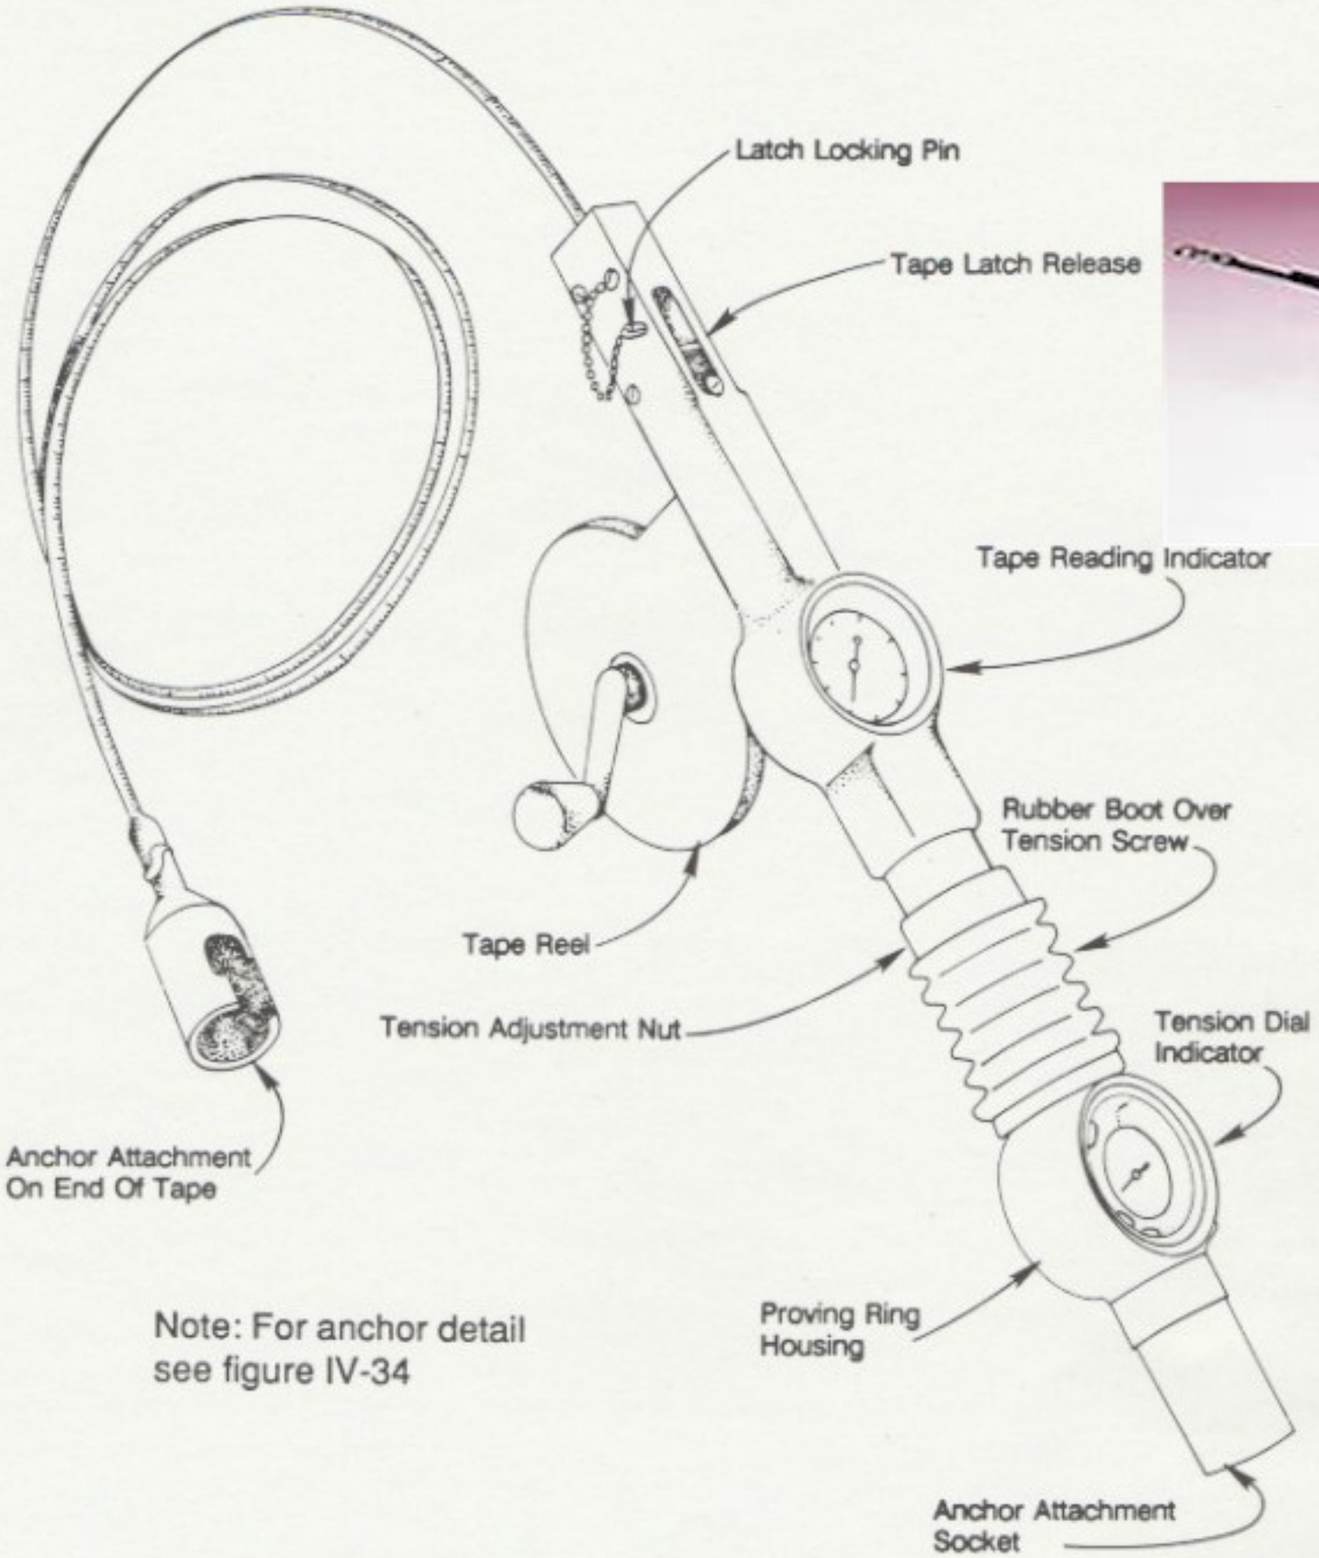

Note: For anchor detail see figure IV-34

Figure IV-34. Typical Installation Methods For Anchor Points

EXPANDING ROCK
ANCHOR BOLT
DRILLED AND TAPPED

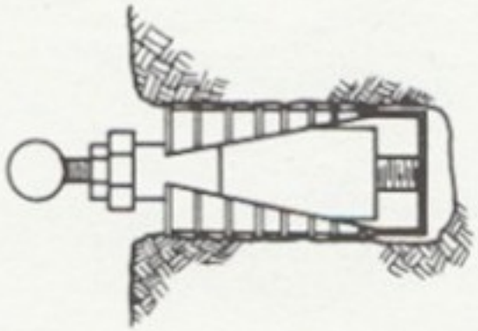

DRILLED AND TAPPED,
GROUTED IN PLACE

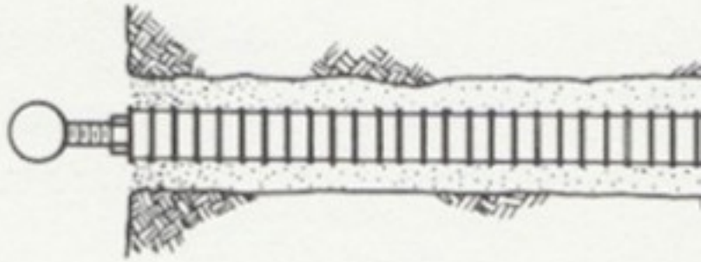

H-BEAM DRILLED
AND TAPPED

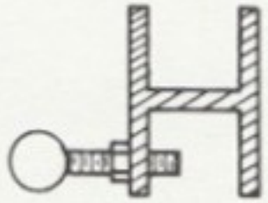
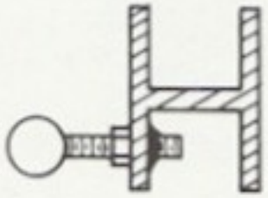
H-BEAM DRILLED,
TAPPED AND WELDED